


Detail 7. Construction Joint (Next Day Pour Where Joint Has Eased Shoulders or Has Opened.)

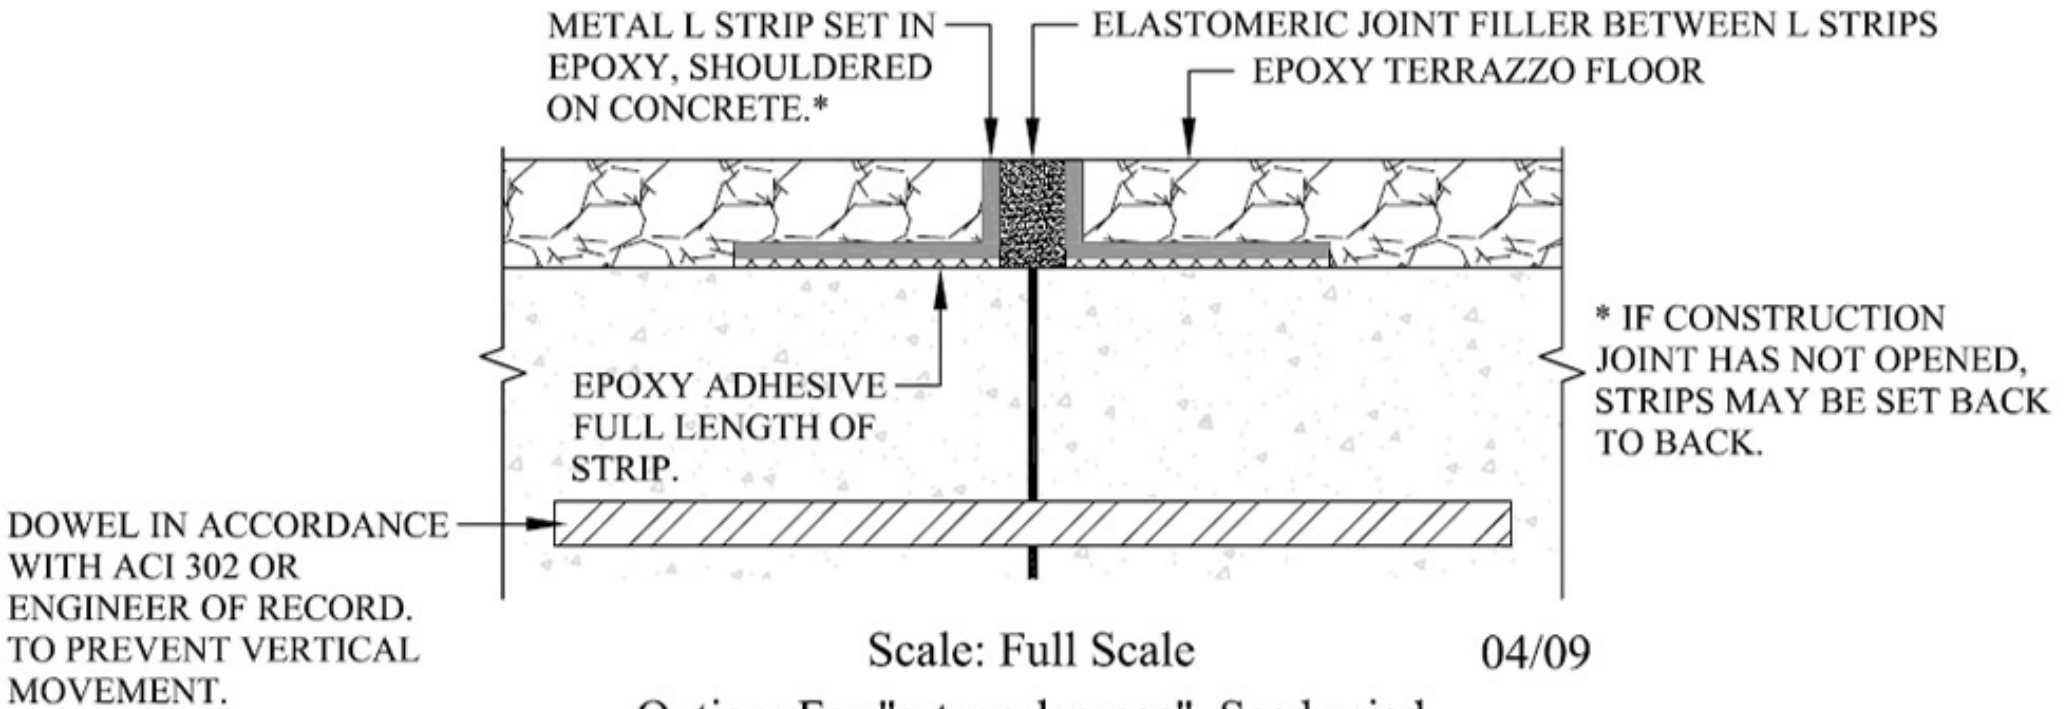

Option: For "art work areas". See buried contraction joint. Refer to detail 3.

*Care should be taken by concrete contractor to provide a straight joint, placed in coordination with design teams consideration of final grid pattern. Square edges encouraged. Tooled edges discouraged.